


# BILL OF MATERIALS FOR PROTÉGER CHANNEL GUIDE.

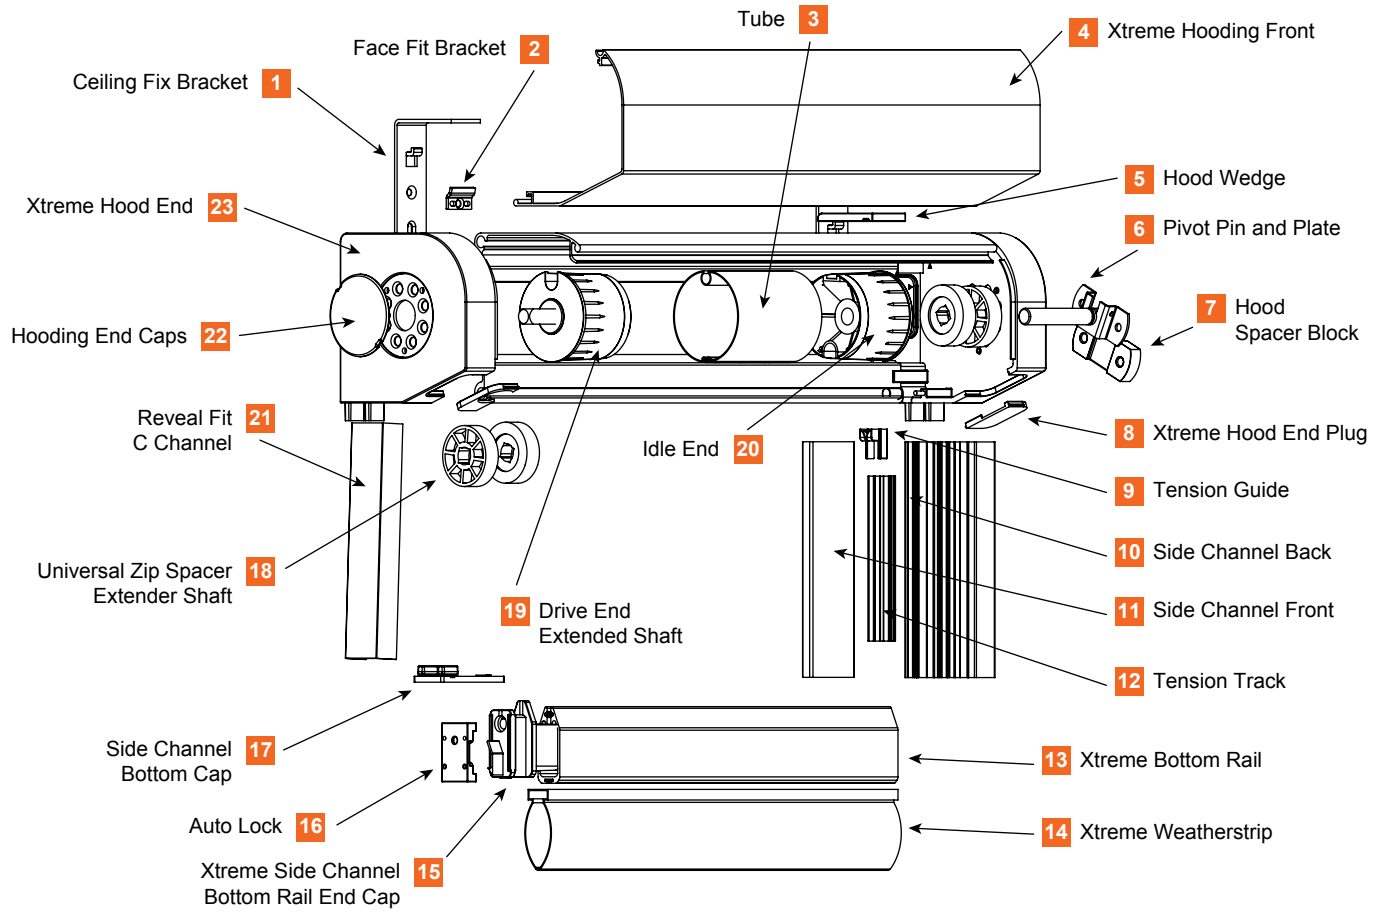

BOM NUMBER	PART NAMES	BOM NUMBER	PART NAMES
1	Ceiling Fix Bracket	12	Tension Track
2	Face Fit Bracket	13	Xtreme Bottom Rail
3	Tube	14	Xtreme Weatherstrip
4	Xtreme Hooding Front	15	Xtreme Side Channel Bottom Rail End Cap
5	Hood Wedge	16	Auto Lock
6	Pivot Pin and Plate	17	Side Channel Bottom Cap
7	Hood Spacer Block	18	Universal Zip Spacer Extender Shaft
8	Xtreme Hood End Plug	19	Drive End Extended Shaft
9	Tension Guide	20	Idle End
10	Side Channel Back	21	Reveal Fit C Channel
11	Side Channel Front	22	Hooding End Caps
		23	Xtreme Hood End

IT'S YOUR CHOICE.

The preferred window covering system supplier to the industry.

Australia +61 7 3804 9000 | [info@uniline.com.au](mailto:info@uniline.com.au) | [uniline.com.au](http://uniline.com.au)

New Zealand +64 9 273 5026 | [salesnz@uniline.com.au](mailto:salesnz@uniline.com.au) | [uniline.co.nz](http://uniline.co.nz)

