


BILL OF MATERIALS FOR PROTÉGER WIRE GUIDE.

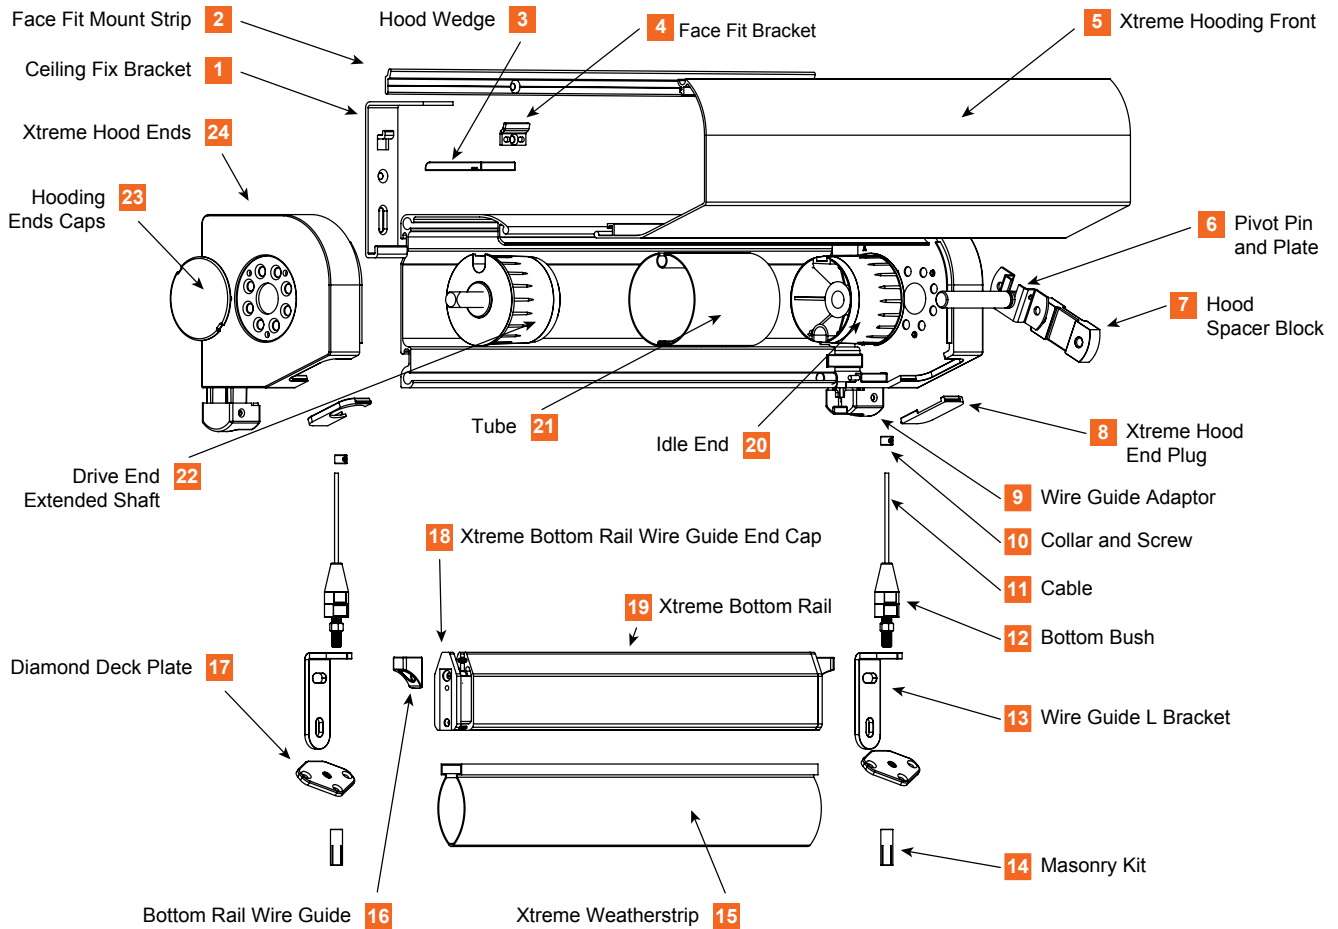

BOM NUMBER	PART NAMES	BOM NUMBER	PART NAMES
1	Ceiling Fix Bracket	13	Wire Guide L Bracket
2	Face Fit Bracket	14	Masonry Kit
3	Hood Wedge	15	Xtreme Weatherstrip
4	Face Fit Bracket	16	Bottom Rail Wire Guide
5	Xtreme Hooding Front	17	Diamond Deck Plate
6	Pivot Pin and Plate	18	Xtreme Bottom Rail Wire Guide End Cap
7	Hood Spacer Block	19	Xtreme Bottom Rail
8	Xtreme Hood End Plug	20	Idle End
9	Wire Guide Adaptor	21	Tube
10	Collar and Screw	22	Drive End Extended Shaft
11	Cable	23	Hooding Ends Caps
12	Bottom Bush	24	Xtreme Hood Ends

IT'S YOUR CHOICE.

The preferred window covering system supplier to the industry.

Australia +61 7 3804 9000 | info@uniline.com.au | uniline.com.au

New Zealand +64 9 273 5026 | salesnz@uniline.com.au | uniline.co.nz

